

Technical Services: Tel: (800) 381-9312 / Fax: (800) 791-5500

Type EA-1 Protectospray® Directional Spray Nozzles, Automatic, Medium Velocity

General Description

The Type EA-1 Protectospray Nozzles are automatic (frangible bulb) directional spray nozzles and they are designed for use in water spray fixed systems for fire protection applications. They are external deflector type nozzles that discharge a uniformly filled cone of medium velocity water droplets.

The EA-1 Nozzles are effective in covering exposed vertical, horizontal, curved, and irregular shaped surfaces in a cooling spray to prevent excessive absorption of heat from an external fire and possible structural damage or spread of fire to the protected equipment; however, use of an automatic nozzle requires consideration of the response time of the thermal element.

The EA-1 Nozzles are also especially effective for area coverage and are sometimes used in lieu of standard sprinklers where directional spray is considered more appropriate. In some applications, depending on water design density requirements, the Type EA-1 Nozzles are also used for fire control or extinguishment.

The Type EA-1 Nozzles are available in three orifice sizes and a wide variety of spray angles (included angle of discharge), as well as temperature rat-

IMPORTANT

Always refer to Technical Data Sheet TFP700 for the "INSTALLER WARNING" that provides cautions with respect to handling and installation of sprinkler systems and components. Improper handling and installation can permanently damage a sprinkler system or its components and cause the nozzle to fail to operate in a fire situation or cause it to operate prematurely. ings, to provide versatility in system design.

It is recommended that the end user be consulted with respect to the suitability of the materials of construction and finish for any given corrosive environment. The effects of ambient temperature, concentration of chemicals, and gas/chemical velocity, should be considered, at a minimum, along with the corrosive nature to which the sprinklers may be exposed.

The Type EA-1 Protectospray Nozzle is a redesignation for the Gem Type EA-1.


WARNINGS

The Type EA-1 Protectospray Nozzles described herein must be installed and maintained in compliance with this document, as well as with the applicable standards of the National Fire Protection Association, in addition to the standards of any other authorities having jurisdiction. **Failure to do so may impair the performance of these devices.**

The design of individual water spray fixed systems can vary considerably, depending on the characteristics and nature of the hazard, the basic purpose of the spraying system, the configuration of the hazard, and wind/draft conditions. Because of these variations as well as the wide range of available nozzle spray characteristics, the design of water spray fixed systems for fire protection must only be performed by experienced designers who thoroughly understand the limitations as well as capabilities of such systems.

The owner is responsible for maintaining their fire protection system and devices in proper operating condition. The installing contractor or sprinkler manufacturer should be contacted with any questions.



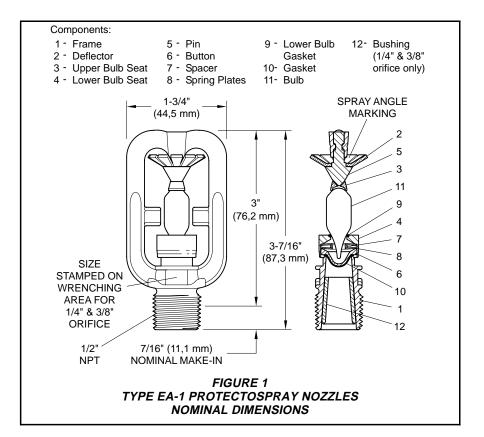

ORIFICE	MINIMUM DIAMETER		K-FAC	CTOR
SIZE			NFPA (GPM ÷ √psi)	ISO/SI_ (LPM ÷ √bar)
1/4"	0.220"	(5,59 mm)	1.4	20,2
3/8"	0.312"	(7,92 mm)	2.8	40,3
1/2"	0.435"	(11,05 mm)	5.6	80,6

TABLE A SELECTION OF ORIFICE SIZES

65°	125°
80°	140°
95°	160°
110°	180°

TABLE B SELECTION OF SPRAY ANGLES

TEMPERATURE RATING	FRAME COLOR CODE	BULB LIQUID COLOR CODE
135°F/57°C	Unpainted	Orange
175°F/79°C	White	Yellow
250°F/121°C	Blue	Blue
325°F/163°C	Red	Mauve
400°F/204°C	Green	Black
500°F/343°C	Orange	Black
	NBLE C CTION OI TURE RA	
SELE		
SELE TEMPERA FINISH &	TEMPI RA	TINGS ERATURE
SELE TEMPERA FINISH & MATERIAL Natural Finish	TEMPI RA All F	ERATURE TINGS
SELE TEMPERA FINISH & MATERIAL Natural Finish Bronze Chrome Plated	TEMPI RA All F All F	TINGS ERATURE TINGS Ratings
SELE TEMPERA FINISH & MATERIAL Natural Finish Bronze Chrome Plated Bronze Lead Coated	TEMPI RA All F All F All F All F 135 175	TINGS ERATURE TINGS Ratings Ratings PF/57°C

TABLE D SELECTION OF FINISH AND MATERIALS

Technical Data

Approvals UL and C-UL Listed. FM Approved.

Maximum Working Pressure 175 psi (12,1 bar). Also refer to Figure 2, Note 2.

Discharge Coefficient Refer to Table A.

Spray Angles Refer to Table B.

Temperature Rating Refer to Table C.

Finish and Material Refer to Table D.

Thread Connection 1/2 inch NPT.

Physical Characteristics

Frame	Bronze
Bushing (K=1.4 & K=2.8)	. Brass
Deflector	
Pin	. Brass
Bulb (11mm dia.)	. Glass
Bulb Seats	
Spacer	Bronze
Button	
Spring Plates	Inconel
Gaskets	

Operation

The glass bulb contains a fluid that expands when exposed to heat. When the rated temperature is reached, the fluid expands sufficiently to shatter the glass bulb, allowing the nozzle to activate and water to flow.


Design Criteria

Nozzle Placement. Where direct impingement of water spray onto all of the protected surface is required by the Authority having Jurisdiction, the nozzles are to be spaced and directed so that their spray patterns will completely cover the plane-of-protection with the minimum required average density; however, it is recommended that indoor nozzle spacing be 12 feet (3,7 m) or less and that outdoor nozzle spacing be 10 feet (3,0 m) or less. Where rundown or slippage is planned, e.g., exposure protection of vessels per NFPA 15, the above recommended indoor and outdoor spacings also apply.

When used for protecting the surfaces of a vessel, for example, the nozzles are positioned normal to and approximately 2 feet (0,6 m) from the surface. This approach, in conjunction with a properly selected spray angle, will tend to make more effective use of the spray as well as help minimize the disturbance effects of wind/draft conditions on the water spray patterns.

Spray Patterns. The Design Spray Profiles for the nozzle spray angles of 65 to 180 degrees are shown in Figure 2 and apply to discharge pressures of 20 to 60 psi (1,4 to 4,1 bar). Discharge pressures in excess of 60 psi (4,1 bar) will result in a decrease in coverage area since the spray patterns tend to draw inwards at higher pressures. Refer inquiries on higher discharge pressures to the Technical Services Department. The maximum axial distances between the nozzle tip and plane-of-protection, for exposure protection, are given in Table E and F. When the axial distance from the nozzle tip to the plane-of-protection is 3 feet (0,6 m) or less, the Design Spray Profile is the same as the nominal spray angles of 65 thru 140 degrees.

Heat Sensitivity. Since the Type EA-1 Protectospray Nozzles are automatic nozzles, they must be located with consideration of their ability to detect abnormal temperature increases due to fire. Therefore, it is recommended that NFPA 13 be reviewed with respect

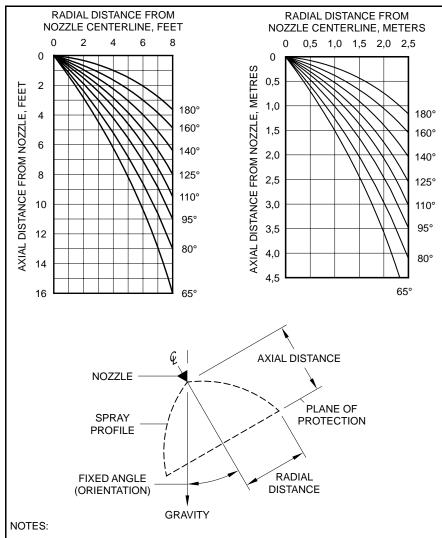

- 1. Design data obtained from tests in still air.
- 2. Design data applies to a residual (flowing) pressure range at the nozzle inlet of 20 to 60 psi (1,4 to 4,1 bar). For pressures up to 175 psi (12,1 bar) consult Tyco Fire & Building Products Technical Services.

Refer to the authority having jurisdiction for their minimum required residual pressures.

- 3. The shapes of the Design Spray Profiles remain essentially unchanged over the maximum Axial Distances shown in Tables E and F.
- 4. For axial distances of 2 feet (0,6 meters) and less and for nozzle spray angles of 65° to 140°, the Design Spray Profile is the same as the nominal spray angle.
- 5. The maximum Axial Distances shown in Tables E and F are based on exposure protection.

FIGURE 2 WATER DISTRIBUTION DESIGN DATA

to the rules that define the permitted distance below ceilings and the spacing limitations for standard coverage automatic sprinklers as a function of occupancy hazard.

Main Pipeline Strainers. Main pipeline strainers per NFPA 15 are required for systems utilizing nozzles with a flow path less than 3/8 inch (9,5 mm) diameter, i.e., K=1.4 and K=2.8 (Ref. Table A), and for any system where the water is likely to contain obstructive material.

TFP800

	IM AXIAI 5° SPRA ET AND	AY ANG	LE		M AXIAI 0 ° SPR/ ET AND	AY ANG	LE	[5° SPR/	_ DISTA AY ANGI INCHE	E	MAXIMUI FOR 11 IN FEI	0° SPR		LE
FIXED ANGLE	OR 1/4"	IFICE S 3/8"	IZE 1/2"	FIXED ANGLE	OR 1/4"	IFICE S	IZE 1/2"		FIXED ANGLE	OR 1/4"	IFICE S 3/8"	IZE 1/2"	FIXED ANGLE	OR 1/4"	IFICE S 3/8"	IZE 1/2"
0°	11-9	14-0	15-0	0°	10-0	13-0	1/2		0°	7-0	10-9	12-3	0°	6-0	10-0	11-0
30°	10-0	12-3	13-0	30°	8-3	11-3	11-6		30°	6-3	10-0	10-6	30°	5-6	8-9	9-9
45°	9-0	11-3	12-3	45°	7-3	10-6	10-9		45°	6-0	9-6	9-6	45°	5-3	8-3	8-9
60°	8-6	10-6	11-9	60°	6-9	9-9	10-3		60°	5-9	9-0	9-0	60°	5-0	7-6	8-3
90°	7-6	10-0	10-9	90°	6-0	8-9	9-6		90°	5-0	7-9	8-6	90°	4-6	6-6	7-9
120°	6-3	7-6	8-9	120°	5-3	6-3	7-6		120°	4-0	5-3	6-3	120°	3-6	4-3	5-6
135°	5-9	6-3	7-9	135°	4-9	5-3	6-6		135°	3-6	4-3	5-3	135°	3-0	3-6	4-6
150°	5-3	5-6	7-0	150°	4-3	4-6	5-6		150°	3-3	3-9	4-6	150°	2-9	3-0	3-9
180°	4-9	5-0	6-3	180°	3-9	4-3	5-0		180°	3-0	3-3	4-0	180°	2-6	2-9	3-6
	IM AXIAI 25° SPR ET AND	AY ANG	LE	MAXIMU FOR 14 IN FE		AY ANG	NCE		MAXIMUI FOR 16	0° SPR		NCE	MAXIMUI FOR 18 IN FEI	0° SPR		SLE .
FOR 1	25° SPR ET AND	AY ANG	iLE S	FOR 14	10 ° SPR ET AND	AY ANG	NCE GLE S		MAXIMUI FOR 16	0° SPR ET AND	AY ANG	NCE LE S	FOR 18	0 ° SPR ET AND	AY ANG	SE S
FOR 12 IN FE	25° SPR ET AND	AY ANG INCHE	iLE S	FOR 14 IN FE	10 ° SPR ET AND	AY ANG INCHE	NCE GLE S		MAXIMUI FOR 16 IN FEI	0° SPR ET AND	AY ANG	NCE LE S	FOR 18 IN FEI	0 ° SPR ET AND	AY ANG INCHE	SE S
FOR 12 IN FE FIXED	25° SPR ET AND OR	AY ANG INCHE IFICE S	IZE	FOR 14 IN FE FIXED	0° SPR ET AND OR	AY ANG INCHE IFICE S	NCE GLE S		MAXIMUI FOR 16 IN FEI FIXED	0° SPR ET AND OR	AY ANG INCHE	NCE LE S IZE	FOR 18 IN FEI FIXED	0° SPR ET AND OR	AY ANG INCHE IFICE S	S IZE
FOR 12 IN FE FIXED ANGLE	25° SPR ET AND OR 1/4"	AY ANG INCHE IFICE S 3/8"	IZE 1/2"	FOR 14 IN FE FIXED ANGLE	0° SPR ET AND OR 1/4"	AY ANG INCHE IFICE S 3/8"	NCE SLE SIZE 1/2"		MAXIMUI FOR 16 IN FEI FIXED ANGLE	0° SPR ET AND OR 1/4"	AY ANG INCHE IFICE S 3/8"	NCE LE S IZE 1/2"	FOR 18 IN FEI FIXED ANGLE	0° SPR ET AND OR 1/4"	AY ANG INCHE IFICE S 3/8"	IZE 1/2"
FOR 12 IN FE FIXED ANGLE 0°	25° SPR ET AND OR 1/4" 4-6	AY ANG INCHE IFICE S 3/8" 7-3	IZE 1/2" 10-0	FOR 14 IN FE FIXED ANGLE 0°	0° SPR ET AND OR 1/4" 4-0	AY ANG INCHE IFICE S 3/8" 6-0	NCE SLE IZE 1/2" 9-3		MAXIMUI FOR 16 IN FEI FIXED ANGLE 0°	0° SPR ET AND OR 1/4" 3-6	AY ANG INCHE IFICE S 3/8" 5-0	NCE LE S IZE 1/2" 7-0	FOR 18 IN FEI FIXED ANGLE 0°	0° SPR ET AND OR 1/4" 3-0	AY ANG INCHE IFICE S 3/8" 3-9	IZE 1/2" 6-0
FOR 12 IN FE FIXED ANGLE 0° 30°	25° SPR ET AND OR 1/4" 4-6 4-3	AY ANG INCHE IFICE S 3/8" 7-3 6-9	IZE 1/2" 10-0 8-3	FOR 14 IN FE FIXED ANGLE 0° 30°	0° SPR ET AND OR 1/4" 4-0 3-6	AY ANG INCHE IFICE S 3/8" 6-0 5-9	NCE SLE NZE 1/2" 9-3 7-0		MAXIMUI FOR 16 IN FEI FIXED ANGLE 0° 30°	0° SPR ET AND OR 1/4" 3-6 3-3	AY ANG INCHE IFICE S 3/8" 5-0 4-9	NCE LE S IZE 1/2" 7-0 5-6	FOR 18 IN FE FIXED ANGLE 0° 30°	0° SPR ET AND OR 1/4" 3-0 2-9	AY ANG INCHE IFICE S 3/8" 3-9 3-6	IZE 1/2" 6-0 5-0
FOR 12 IN FE FIXED ANGLE 0° 30° 45°	25° SPR ET AND 0R 1/4" 4-6 4-3 3-9	AY ANG INCHE IFICE S 3/8" 7-3 6-9 6-3	LE S IZE 1/2" 10-0 8-3 7-3	FOR 14 IN FE FIXED ANGLE 0° 30° 45°	0° SPR ET AND 0R 1/4" 4-0 3-6 3-3	AY ANG INCHE IFICE S 3/8" 6-0 5-9 5-3	NCE SLE SIZE 1/2" 9-3 7-0 6-3		MAXIMUI FOR 16 IN FEI FIXED ANGLE 0° 30° 45°	0° SPR ET AND 0R 1/4" 3-6 3-3 2-9	AY ANG INCHE IFICE S 3/8" 5-0 4-9 4-3	NCE LE S IZE 1/2" 7-0 5-6 4-9	FOR 18 IN FE FIXED ANGLE 0° 30° 45°	0° SPR ET AND 0R 1/4" 3-0 2-9 2-6	AY ANG INCHE IFICE S 3/8" 3-9 3-6 3-0	IZE 1/2" 6-0 5-0 4-3
FOR 12 IN FE FIXED ANGLE 0° 30° 45° 60°	25° SPR ET AND 0R 1/4" 4-6 4-3 3-9 3-3	AY ANG INCHE IFICE S 3/8" 7-3 6-9 6-3 5-6	LE S IZE 1/2" 10-0 8-3 7-3 6-6	FOR 14 IN FE FIXED ANGLE 0° 30° 45° 60°	0° SPR ET AND 0R 1/4" 4-0 3-6 3-3 2-9	AY ANG INCHE IFICE S 3/8" 6-0 5-9 5-3 4-9	NCE SLE 1/2" 9-3 7-0 6-3 5-6	F A	MAXIMUI FOR 16 IN FEI FIXED ANGLE 0° 30° 45° 60°	0° SPR ET AND OR 1/4" 3-6 3-3 2-9 1-9	AY ANG INCHE IFICE S 3/8" 5-0 4-9 4-3 3-9	NCE LE S IZE 1/2" 7-0 5-6 4-9 4-6	FOR 18 IN FEI FIXED ANGLE 0° 30° 45° 60°	0° SPR ET AND OR 1/4" 3-0 2-9 2-6 2-3	AY ANG INCHE IFICE S 3/8" 3-9 3-6 3-0 2-9	IZE 1/2" 6-0 5-0 4-3 3-9
FOR 12 IN FE FIXED ANGLE 0° 30° 45° 60° 90°	25° SPR ET AND 0R 1/4" 4-6 4-3 3-9 3-3 2-6	AY ANG INCHE IFICE S 3/8" 7-3 6-9 6-3 5-6 5-0	ILE S IZE 1/2" 10-0 8-3 7-3 6-6 5-9	FOR 14 IN FE FIXED ANGLE 0° 30° 45° 60° 90°	0° SPR ET AND OR 1/4" 4-0 3-6 3-3 2-9 2-0	AY ANG INCHE IFICE S 3/8" 6-0 5-9 5-3 4-9 4-0	NCE LE S 1/2" 9-3 7-0 6-3 5-6 4-9	F A	MAXIMUI FOR 16 IN FEI FIXED ANGLE 0° 30° 45° 60° 90°	0° SPR ET AND OR 1/4" 3-6 3-3 2-9 1-9 1-6	AY ANG INCHE IFICE S 3/8" 5-0 4-9 4-3 3-9 3-3	NCE LE S IZE 1/2" 7-0 5-6 4-9 4-6 3-6	FOR 18 IN FEI FIXED ANGLE 0° 30° 45° 60° 90°	0° SPR ET AND OR 1/4" 3-0 2-9 2-6 2-3 1-3	AY ANG INCHE IFICE S 3/8" 3-9 3-6 3-0 2-9 1-9	IZE 1/2" 6-0 5-0 4-3 3-9 3-0
FOR 12 IN FE FIXED ANGLE 0° 30° 45° 60° 90° 120°	25° SPR ET AND 0R 1/4" 4-6 4-3 3-9 3-3 2-6 2-3	AY ANG INCHE IFICE S 3/8" 7-3 6-9 6-3 5-6 5-0 3-3	IZE 1/2" 10-0 8-3 7-3 6-6 5-9 4-0	FOR 14 IN FE FIXED ANGLE 0° 30° 45° 60° 90° 120°	0° SPR ET AND OR 1/4" 4-0 3-6 3-3 2-9 2-0 1-9	AY ANG INCHE IFICE S 3/8" 6-0 5-9 5-3 4-9 4-0 2-3	NCE LE S 1/2" 9-3 7-0 6-3 5-6 4-9 3-3		MAXIMUI FOR 16 IN FE FIXED ANGLE 0° 30° 45° 60° 90° 120°	0° SPR ET AND OR 1/4" 3-6 3-3 2-9 1-9 1-6 1-3	AY ANG INCHE IFICE S 3/8" 5-0 4-9 4-3 3-9 3-3 1-9	NCE LE S IZE 1/2" 7-0 5-6 4-9 4-6 3-6 3-0	FOR 18 IN FEI FIXED ANGLE 0° 30° 45° 60° 90° 120°	0° SPR ET AND OR 1/4" 3-0 2-9 2-6 2-3 1-3 0-9	AY ANG INCHE IFICE S 3/8" 3-9 3-6 3-0 2-9 1-9 1-0	IZE 1/2" 6-0 5-0 4-3 3-9 3-0 2-6

TABLE E MAXIMUM AXIAL DISTANCE BETWEEN NOZZLE TIP AND PLANE-OF-PROTECTION FOR EXPOSURE PROTECTION — FEET AND INCHES —

Installation

Type EA-1 Protectospray Nozzles must be installed in accordance with the following instructions:

NOTES

Do not install an EA-1 Nozzle if the bulb is cracked or there is a loss of liquid from the bulb. With the sprinkler held horizontally, a small air bubble should be present. The diameter of the air bubble is approximately 3/32 inch (2,4 mm) for the 135°F/57°C to 1/4 inch (6,4 mm) for the 500°F/343°C temperature ratings.

A leak tight 1/2 inch NPT nozzle joint should be obtained with a torque of 7 to 14 ft.lbs. (9,5 to 19,0 Nm). A maximum of 21 ft. lbs. (28,5 Nm) of torque may be used to install nozzles with 1/2 NPT connections. Higher levels of torque may distort the nozzle inlet and cause leakage or impairment of the nozzle.

Step 1. With pipe thread sealant applied to the pipe threads, hand tighten the nozzle into the nozle fitting.

Step 2. Tighten the nozzle into the nozzle fitting using only the W-Type 11 Sprinkler Wrench (Ref. Figure 3), except that an 8 or 10 inch adjustable crescent wrench is to be used for wax coated nozzles. With reference to Figure 1 the W-Type 11 Sprinkler Wrench or the adjustable crescent wrench, as applicable is to be applied to the wrenching area.

When installing wax coated nozzles with the adjustable crescent wrench, additional care needs to be exercised to prevent damage to the wax coating on the nozzle wrenching area or frame arms and, consequently, exposure of bare metal to the corrosive environment. The jaws of the wrench should be opened sufficiently wide to pass over the wrenching area without damaging the wax coating. Before wrench tightening the nozzle, the jaws of the wrench are to be adjusted to just contact the nozzle wrenching area. After wrench tightening the nozzle, loosen the wrench jaws before removing the wrench.

After installation, the nozzle wrenching

area and frame arms must be inspected and the wax coating retouched (repaired) whenever the coating has been damaged and bare metal is exposed. The wax coating on the wrenching area can be retouched by gently applying a heated 1/8 inch diameter steel rod to the areas of wax that have been damaged, to smooth it back over areas where bare metal is exposed.

NOTES

Only retouching of the wax coating applied to the wrenching area and frame arms is permitted, and the retouching is to be performed only at the time of the initial nozzle installation.

The steel rod should be heated only to the point at which it can begin to melt the wax, and appropriate precautions need to be taken, when handling the heated rod, in order to prevent the installer from being burned.

TFP800

Page 5 of 6

MAXIMUM AXIAL DISTANCE FOR 65° SPRAY ANGLE IN METERS					
FIXED	OR	IFICE S	IZE		
ANGLE	1/4"	3/8"	1/2"		
0°	3,6	4,3	4,6		
30°	3,0	3,7	4,0		
45°	2,7	3,4	3,7		
60°	2,6	3,2	3,6		
90°	2,3	3,0	3,3		
120°	1,9	2,3	2,7		
135°	1,8	1,9	2,4		
150°	1,6	1,7	2,1		
180°	1,4	1,5	1,9		

MAXIMUM AXIAL DISTANCE FOR 80° SPRAY ANGLE IN METERS						
FIXED	OR	IFICE S	IZE			
ANGLE	1/4"	3/8"	1/2"			
0°	3,0	4,0	4,3			
30°	2,5	3,4	3,5			
45°	2,2	3,2	3,3			
60°	2,1	3,0	3,1			
90°	1,8	2,7	2,9			
120°	1,6	1,9	2,3			
135°	1,4	1,6	2,0			
150°	1,3	1,4	1,7			
180°	1,1	1,3	1,5			

			-		
MAXIMUM AXIAL DISTANCE FOR 95 ° SPRAY ANGLE IN METERS					
FIXED	OR	IFICE S	IZE		
ANGLE	1/4"	3/8"	1/2"		
0°	2,7	3,3	3,7		
30°	1,9	3,0	3,2		
45°	1,8	2,9	2,9		
60°	1,8	2,7	2,7		
90°	1,5	2,4	2,6		
120°	1,2	1,6	1,9		
135°	1,1	1,3	1,6		
150°	1,0	1,1	1,4		
180°	0,9	1,0	1,2		

MAXIMUM AXIAL DISTANCE FOR 110° SPRAY ANGLE IN METERS					
FIXED	OR	IFICE S	IZE		
ANGLE	1/4"	3/8"	1/2"		
0°	1,8	3,0	3,4		
30°	1,7	2,7	3,0		
45°	1,6	2,5	2,7		
60°	1,5	2,3	2,5		
90°	1,4	2,0	2,4		
120°	1,1	1,3	1,7		
135°	0,9	1,1	1,4		
150°	0,8	0,9	1,1		
180°	0,8	0,8	1,1		


MAXIMUM AXIAL DISTANCE FOR 125° SPRAY ANGLE IN METERS					
FIXED	OR	IFICE S	IZE		
ANGLE	1/4"	3/8"	1/2"		
0°	1,4	2,2	3,0		
30°	1,3	2,1	2,5		
45°	1,1	1,9	2,2		
60°	1,0	1,7	2,0		
90°	0,8	1,5	1,8		
120°	0,7	1,0	1,2		
135°	0,6	0,8	1,1		
150°	0,5	0,6	0,9		
180°	0,5	0,5	0,8		

MAXIMUM AXIAL DISTANCE FOR 140° SPRAY ANGLE IN METERS						
FIXED	OR	IFICE S	IZE			
ANGLE	1/4"	3/8"	1/2"			
0°	1,2	1,8	2,8			
30°	1,1	1,8	2,1			
45°	1,0	1,6	1,9			
60°	0,8	1,4	1,7			
90°	0,6	1,2	1,4			
120°	0,5	0,7	1,0			
135°	0,5	0,5	0,8			
150°	0,5	0,4	0,7			
180°	0.4	0.4	0.5			

MAXIMUM AXIAL DISTANCE FOR 160° SPRAY ANGLE IN METERS					
FIXED	OR	IFICE S	IZE		
ANGLE	1/4"	3/8"	1/2"		
0°	1,1	1,5	2,1		
30°	1,0	1,4	1,7		
45°	0,8	1,3	1,4		
60°	0,5	1,1	1,4		
90°	0,5	1,0	1,1		
120°	0,4	0,5	0,9		
135°	0,3	0,4	0,8		
150°	0,3	0,3	0,5		
180°	0,2	0,3	0,4		

MAXIMUM AXIAL DISTANCE FOR 180° SPRAY ANGLE IN METERS			
FIXED ANGLE	ORIFICE SIZE		
	1/4"	3/8"	1/2"
0°	0,9	1,1	1,8
30°	0,8	1,1	1,5
45°	0,8	0,9	1,3
60°	0,7	0,8	1,1
90°	0,4	0,5	0,9
120°	0,2	0,3	0,8
135°	0,2	0,2	0,7
150°	0,2	0,2	0,3
180°	0,2	0,2	0,2

TABLE F MAXIMUM AXIAL DISTANCE BETWEEN NOZZLE TIP AND PLANE-OF-PROTECTION FOR EXPOSURE PROTECTION — METERS —

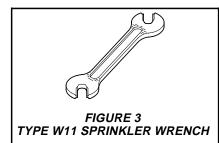

Care and Maintenance

The Type EA-1 Protectospray Nozzles must be maintained and serviced in accordance with the following instructions:

NOTE

Before closing a fire protection system main control valve for maintenance work on the fire protection system that it controls, permission to shut down the affected fire protection system must be obtained from the proper authorities and all personnel who may be affected by this action must be notified.


Type EA-1 Protectospray Nozzles must never be painted, plated, coated or altered in any way after leaving the factory; otherwise, the spray performance and heat sensitivity may be impaired.

Care must be exercised to avoid damage to the nozzles - before, during, and after installation. Nozzles damaged by dropping, striking, wrench twist/slippage, or the like, must be replaced.

Frequent visual inspections are recommended to be initially performed for nozzles installed in potentially corrosive atmospheres to verify the integrity of the materials of construction and finish as they may be affected by the corrosive conditions present for a given installation. Thereafter, annual inspections per NFPA 25 are required.

The owner is responsible for the inspection, testing, and maintenance of their fire protection system and devices in compliance with this document, as well as with the applicable standards of the National Fire Protection Association (e.g., NFPA 25), in addition to the standards of any other authorities having jurisdiction. The installing contractor or sprinkler manufacturer should be contacted relative to any questions.

It is recommended that water spray fixed systems be inspected, tested, and maintained by a qualified Inspection Service in accordance with local requirements and/or national codes.

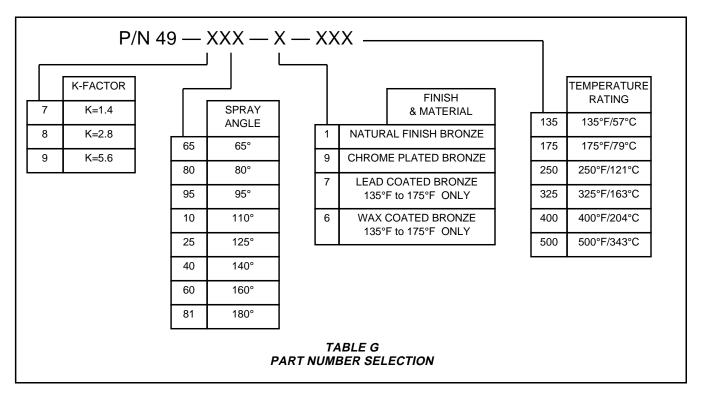

Limited Warranty

Products manufactured by Tyco Fire & Building Products (TFBP) are warranted solely to the original Buyer for ten (10) years against defects in material and workmanship when paid for and properly installed and maintained under normal use and service. This warranty will expire ten (10) years from date of shipment by TFBP. No warranty is given for products or components manufactured by companies not affiliated by ownership with TFBP or for products and components which have been subject to misuse, improper installation, corrosion, or which have not been installed, maintained, modified or repaired in accordance with applicable Standards of the National Fire Protection Association, and/or the standards of any other Authorities Having Jurisdiction. Materials found by TFBP to be defective shall be either repaired or replaced, at TFBP's sole option. TFBP neither assumes, nor authorizes any person to assume for it, any other obligation in connection with the sale of products or parts of products. TFBP shall not be responsible for sprinkler system design errors or inaccurate or incomplete information supplied by Buyer or Buyer's representatives.

In no event shall TFBP be liable, in contract, tort, strict liability or under any other legal theory, for incidental,

indirect, special or consequential damages, including but not limited to labor charges, regardless of whether TFBP was informed about the possibility of such damages, and in no event shall TFBP's liability exceed an amount equal to the sales price.

The foregoing warranty is made in lieu of any and all other warranties, express or implied, including warranties of merchantability and fitness for a particular purpose.

This limited warranty sets forth the exclusive remedy for claims based on failure of or defect in products, materials or components, whether the claim is made in contract, tort, strict liability or any other legal theory.

This warranty will apply to the full extent permitted by law. The invalidity, in whole or part, of any portion of this warranty will not affect the remainder.

Ordering Procedure

When placing an order, indicate the full product name and P/N.

Contact your local distributor for availability.

EA-1 Protectospray Nozzles:

Specify: (1.4, 2.8, or 5.6) K-factor orifice, (specify temperature rating), Type EA-1 Protectospray Nozzle with (specify finish/coating and material) with (specify number) degree spray angle, P/N (specify from table G).

Sprinkler Wrench:

Specify: Type W11 Sprinkler Wrench, P/N 56-452-1-001.